

LEXUS CT (Hybrid)											year: 2018 →											with and without Keyless System											program №: 13193										from: 2020-09-01																				
connector 8 pin								connector 15 pin															connector 10 pin																																								
CAN H	CAN L	CAN H	CAN L	CAN H	CAN L	CAN L	OUT +	OUT +	OUT	OUT	OUT	OUT	OUT	OUT	OUT	OUT	OUT	OUT	OUT	OUT	OUT	OUT	OUT	OUT	OUT	OUT	OUT	OUT	OUT	OUT	IN	IN	IN	IN	IN	IN	IN	IN	IN	IN	+	+																					
CAN1-H	CAN1-L	CAN2-H	CAN2-L	CAN3-H	CAN3-L		Alternative blink control	Alt. contr. centr. lock	Driver door sensor	Passengers door sensor	Trunk lid	Hood sense	Original alarm++	Arming state	Lock factory remote	Unlock factory remote	Switches combination	Handbrake / Parking	Speed 10kmph	Engine running	Engine speed (RPM)	Ignition	Key inserted	Footbrake	Drivers door opening sim.	Turn off the engine	Turn on the engine	Turn signal control	Trunk release	Opening all doors	All doors lock	GND	PWR +12V			+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+								
1	2	3	4	5	6	7	8		1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	1	2	3	4	5	6	7	8	9	10			+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+		

Attention: The module controls the windows, which are equipped with the "AUTO" function.

LEXUS CT (Hybrid)											year: 2011 →											with and without Keyless System											program №: 11138										from: 2017-09-01																				
connector 8 pin								connector 15 pin															connector 10 pin																																								
CAN H	CAN L	CAN H	CAN L	CAN H	CAN L	CAN L	OUT +	OUT +	OUT	OUT	OUT	OUT	OUT	OUT	OUT	OUT	OUT	OUT	OUT	OUT	OUT	OUT	OUT	OUT	OUT	OUT	OUT	OUT	OUT	OUT	OUT	IN	IN	IN	IN	IN	IN	IN	IN	IN	IN	+	+																				
CAN1-H	CAN1-L	CAN2-H	CAN2-L	CAN3-H	CAN3-L		Alternative blink control	Alt. contr. centr. lock	Driver door sensor	Passengers door sensor	Trunk lid	Hood sense	Original alarm++	Arming state	Lock factory remote	Unlock factory remote	Switches combination	Handbrake / Parking	Speed 10kmph	Engine running	Engine speed (RPM)	Ignition	Key inserted	Footbrake	Drivers door opening sim.	Turn off the engine	Turn on the engine	Turn signal control	Trunk release	Opening all doors	All doors lock	GND	PWR +12V			+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+				
1	2	3	4	5	6	7	8		1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	1	2	3	4	5	6	7	8	9	10			+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+		

Attention: The module controls the windows, which are equipped with the "AUTO" function. When the car is locked by the factory remote control, the "Driver door unlock" function does not work. When the car is locked by the factory remote control, the "All doors unlock" function does not work.

LEXUS ES (Hybrid)											year: 2019 →											with and without Keyless System											program №: 13192										from: 2020-05-26																				
connector 8 pin								connector 15 pin															connector 10 pin																																								
CAN H	CAN L	CAN H	CAN L	CAN H	CAN L	CAN L	OUT +	OUT +	OUT	OUT	OUT	OUT	OUT	OUT	OUT	OUT	OUT	OUT	OUT	OUT	OUT	OUT	OUT	OUT	OUT	OUT	OUT	OUT	OUT	OUT	OUT	IN	IN	IN	IN	IN	IN	IN	IN	IN	IN	+	+																				
CAN1-H	CAN1-L	CAN2-H	CAN2-L	CAN3-H	CAN3-L		Alternative blink control	Alt. contr. centr. lock	Driver door sensor	Passengers door sensor	Trunk lid	Hood sense	Original alarm++	Arming state	Lock factory remote	Unlock factory remote	Switches combination	Handbrake / Parking	Speed 10kmph	Engine running	Engine speed (RPM)	Ignition	Key inserted	Footbrake	Drivers door opening sim.	Turn off the engine	Turn on the engine	Turn signal control	Trunk release	Opening all doors	All doors lock	GND	PWR +12V			+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+				
1	2	3	4	5	6	7	8		1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	1	2	3	4	5	6	7	8	9	10			+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+		

Attention: When the car is closed from the factory remote control, the "Driver door opening" function may cause the factory alarm to be activated. When the car is closed from the factory remote control, the "All doors unlock" function may cause the factory alarm to be activated.

LEXUS ES											year: 2013 →											with and without Keyless System											program №: 11338										from: 2017-09-01																				
connector 8 pin								connector 15 pin															connector 10 pin																																								
CAN H	CAN L	CAN H	CAN L	CAN H	CAN L	CAN L	OUT +	OUT +	OUT	OUT	OUT	OUT	OUT	OUT	OUT	OUT	OUT	OUT	OUT	OUT	OUT	OUT	OUT	OUT	OUT	OUT	OUT	OUT	OUT	OUT	OUT	IN	IN	IN	IN	IN	IN	IN	IN	IN	IN	+	+																				
CAN1-H	CAN1-L	CAN2-H	CAN2-L	CAN3-H	CAN3-L		Alternative blink control	Alt. contr. centr. lock	Driver door sensor	Passengers door sensor	Trunk lid	Hood sense	Original alarm++	Arming state	Lock factory remote	Unlock factory remote	Switches combination	Handbrake / Parking	Speed 10kmph	Engine running	Engine speed (RPM)	Ignition	Key inserted	Footbrake	Drivers door opening sim.	Turn off the engine	Turn on the engine	Turn signal control	Trunk release	Opening all doors	All doors lock	GND	PWR +12V			+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+				
1	2	3	4	5	6	7	8		1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	1	2	3	4	5	6	7	8	9	10			+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+		

Attention: The module controls the windows, which are equipped with the "AUTO" function. When the car is locked by the factory remote control, the "Driver door unlock" function does not work. When the car is locked by the factory remote control, the "All doors unlock" function does not work. The "Trunk release" function does not open the electric trunk lid.

LEXUS ES (Hybrid)											year: 2013 →											with and without Keyless System											program №: 11338										from: 2017-09-01																				
connector 8 pin								connector 15 pin															connector 10 pin																																								
CAN H	CAN L	CAN H	CAN L	CAN H	CAN L	CAN L	OUT +	OUT +	OUT	OUT	OUT	OUT	OUT	OUT	OUT	OUT	OUT	OUT	OUT	OUT	OUT	OUT	OUT	OUT	OUT	OUT	OUT	OUT	OUT	OUT	OUT	IN	IN	IN	IN	IN	IN	IN	IN	IN	IN	+	+																				
CAN1-H	CAN1-L	CAN2-H	CAN2-L	CAN3-H	CAN3-L		Alternative blink control	Alt. contr. centr. lock	Driver door sensor	Passengers door sensor	Trunk lid	Hood sense	Original alarm++	Arming state	Lock factory remote	Unlock factory remote	Switches combination	Handbrake / Parking	Speed 10kmph	Engine running	Engine speed (RPM)	Ignition	Key inserted	Footbrake	Drivers door opening sim.	Turn off the engine	Turn on the engine	Turn signal control	Trunk release	Opening all doors	All doors lock	GND	PWR +12V			+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+				
1	2	3	4	5	6	7	8		1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	1	2	3	4	5	6	7	8	9	10			+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+		

Attention: The module controls the windows, which are equipped with the "AUTO" function. When the car is locked by the factory remote control, the "Driver door unlock" function does not work. When the car is locked by the factory remote control, the "All doors unlock" function does not work. The "Trunk release" function does not open the electric trunk lid.

LEXUS ES year: 2007 → with and without Keyless System program No: 11138 from: 2017-09-01

connector 8 pin								connector 15 pin															connector 10 pin																																		
CAN H	CAN L	CAN H	CAN L	CAN H	CAN L	OUT +/-	OUT +/-	OUT -	OUT -	OUT -	OUT -	OUT -	OUT -	OUT -	OUT -	OUT -	OUT -	OUT -	OUT -	OUT -	OUT +	OUT +	OUT +	IN -	IN -	IN -	IN -	IN -	IN -	IN -	IN -	IN -	IN -																								
CAN1-H	CAN1-L	CAN2-H	CAN2-L	CAN3-H	CAN3-L	Alternative blink control	Alt. contr. centr. lock	Driver door sensor	Passengers door sensor	Trunk lid	Hood sense	Original alarm++	Arming state	Lock factory remote	Unlock factory remote	Switches combination	Handbrake / Parking	Speed 10kmph	Engine running	Engine speed (RPM)	Ignition	Key inserted	Footbrake	Drivers door opening sim.	Turn off the engine	Turn on the engine	Turn signal control	Trunk release	Opening all doors	All doors lock	GND	PWR +12V	Contr. of factory alarm	Contr.c.lock. when ign.is on	Comfort closure																						
1	2	3	4	5	6	7	8	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	1	2	3	4	5	6	7	8	9	10	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+

Attention: The module controls the windows, which are equipped with the "AUTO" function. When the car is locked by the factory remote control, the "Driver door unlock" function does not work. When the car is locked by the factory remote control, the "All doors unlock" function does not work.

LEXUS GS (Hybrid) year: 2016 → with and without Keyless System program No: 13214 from: 2020-05-26

connector 8 pin								connector 15 pin															connector 10 pin																																		
CAN H	CAN L	CAN H	CAN L	CAN H	CAN L	OUT +/-	OUT +/-	OUT -	OUT -	OUT -	OUT -	OUT -	OUT -	OUT -	OUT -	OUT -	OUT -	OUT -	OUT -	OUT -	OUT +	OUT +	OUT +	IN -	IN -	IN -	IN -	IN -	IN -	IN -	IN -	IN -																									
CAN1-H	CAN1-L	CAN2-H	CAN2-L	CAN3-H	CAN3-L	Alternative blink control	Alt. contr. centr. lock	Driver door sensor	Passengers door sensor	Trunk lid	Hood sense	Original alarm++	Arming state	Lock factory remote	Unlock factory remote	Switches combination	Handbrake / Parking	Speed 10kmph	Engine running	Engine speed (RPM)	Ignition	Key inserted	Footbrake	Drivers door opening sim.	Turn off the engine	Turn on the engine	Turn signal control	Trunk release	Opening all doors	All doors lock	GND	PWR +12V	Contr. of factory alarm	Contr.c.lock. when ign.is on	Comfort closure																						
1	2	3	4	5	6	7	8	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	1	2	3	4	5	6	7	8	9	10	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+

Attention: The module controls the windows, which are equipped with the "AUTO" function.

LEXUS GS (Hybrid) year: 2013 → with and without Keyless System program No: 11338 from: 2017-09-01

connector 8 pin								connector 15 pin															connector 10 pin																																		
CAN H	CAN L	CAN H	CAN L	CAN H	CAN L	OUT +/-	OUT +/-	OUT -	OUT -	OUT -	OUT -	OUT -	OUT -	OUT -	OUT -	OUT -	OUT -	OUT -	OUT -	OUT -	OUT +	OUT +	OUT +	IN -	IN -	IN -	IN -	IN -	IN -	IN -	IN -	IN -																									
CAN1-H	CAN1-L	CAN2-H	CAN2-L	CAN3-H	CAN3-L	Alternative blink control	Alt. contr. centr. lock	Driver door sensor	Passengers door sensor	Trunk lid	Hood sense	Original alarm++	Arming state	Lock factory remote	Unlock factory remote	Switches combination	Handbrake / Parking	Speed 10kmph	Engine running	Engine speed (RPM)	Ignition	Key inserted	Footbrake	Drivers door opening sim.	Turn off the engine	Turn on the engine	Turn signal control	Trunk release	Opening all doors	All doors lock	GND	PWR +12V	Contr. of factory alarm	Contr.c.lock. when ign.is on	Comfort closure																						
1	2	3	4	5	6	7	8	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	1	2	3	4	5	6	7	8	9	10	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+

Attention: The module controls the windows, which are equipped with the "AUTO" function. When the car is locked by the factory remote control, the "All doors unlock" function does not work.

LEXUS GS year: 2012 → with and without Keyless System program No: 11338 from: 2017-09-01

connector 8 pin								connector 15 pin															connector 10 pin																																		
CAN H	CAN L	CAN H	CAN L	CAN H	CAN L	OUT +/-	OUT +/-	OUT -	OUT -	OUT -	OUT -	OUT -	OUT -	OUT -	OUT -	OUT -	OUT -	OUT -	OUT -	OUT -	OUT +	OUT +	OUT +	IN -	IN -	IN -	IN -	IN -	IN -	IN -	IN -	IN -																									
CAN1-H	CAN1-L	CAN2-H	CAN2-L	CAN3-H	CAN3-L	Alternative blink control	Alt. contr. centr. lock	Driver door sensor	Passengers door sensor	Trunk lid	Hood sense	Original alarm++	Arming state	Lock factory remote	Unlock factory remote	Switches combination	Handbrake / Parking	Speed 10kmph	Engine running	Engine speed (RPM)	Ignition	Key inserted	Footbrake	Drivers door opening sim.	Turn off the engine	Turn on the engine	Turn signal control	Trunk release	Opening all doors	All doors lock	GND	PWR +12V	Contr. of factory alarm	Contr.c.lock. when ign.is on	Comfort closure																						
1	2	3	4	5	6	7	8	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	1	2	3	4	5	6	7	8	9	10	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+

Attention: The module controls the windows, which are equipped with the "AUTO" function. When the car is locked by the factory remote control, the "All doors unlock" function does not work.

LEXUS GS year: 2006 → with and without Keyless System program No: 11181 from: 2017-09-01

connector 8 pin								connector 15 pin															connector 10 pin																																		
CAN H	CAN L	CAN H	CAN L	CAN H	CAN L	OUT +/-	OUT +/-	OUT -	OUT -	OUT -	OUT -	OUT -	OUT -	OUT -	OUT -	OUT -	OUT -	OUT -	OUT -	OUT -	OUT +	OUT +	OUT +	IN -	IN -	IN -	IN -	IN -	IN -	IN -	IN -	IN -																									
CAN1-H	CAN1-L	CAN2-H	CAN2-L	CAN3-H	CAN3-L	Alternative blink control	Alt. contr. centr. lock	Driver door sensor	Passengers door sensor	Trunk lid	Hood sense	Original alarm++	Arming state	Lock factory remote	Unlock factory remote	Switches combination	Handbrake / Parking	Speed 10kmph	Engine running	Engine speed (RPM)	Ignition	Key inserted	Footbrake	Drivers door opening sim.	Turn off the engine	Turn on the engine	Turn signal control	Trunk release	Opening all doors	All doors lock	GND	PWR +12V	Contr. of factory alarm	Contr.c.lock. when ign.is on	Comfort closure																						
1	2	3	4	5	6	7	8	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	1	2	3	4	5	6	7	8	9	10	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+

Attention: "Factory system alarm" & "Armed state" statuses work correctly after 30 seconds from the closing of the car by factory remote control (earlier opening of the doors equates to opening the car by factory remote control).

Switches: [Icons]

[en]-> P/N 327010xx (U277_70_10)

LEXUS GX								year: 2014 →	with and without Keyless System	program No: 11568	from: 2017-09-01																								
connector 8 pin								connector 15 pin							connector 10 pin																				
CAN H	CAN L	CAN H	CAN L	CAN H	CAN L	OUT +	OUT +	OUT -	OUT -	OUT -	OUT -	OUT -	OUT -	OUT -	OUT +	OUT +	OUT +	IN	IN	IN	IN	IN	IN	IN	IN	IN									
CAN1-H	CAN1-L	CAN2-H	CAN2-L	CAN3-H	CAN3-L	Alternative blink control	Alt. contr. centr. lock	Driver door sensor	Passengers door sensor	Trunk lid	Hood sense	Original alarm++	Arming state	Lock factory remote	Unlock factory remote	Switches combination	Handbrake / Parking	Speed 10kmph	Engine running	Engine speed (RPM)	Ignition	Key inserted	Footbrake	Drivers door opening sim.	Turn off the engine	Turn on the engine	Turn signal control	Trunk release	Opening all doors	All doors lock	GND	PWR +12V	Contr. of factory alarm	Contr.c.lock when ign.is on	Comfort closure
1	2	3	4	5	6	7	8	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	1	2	3	4	5	6	7	8	9	10	+	+	+

Attention: The "Trunk release" function opens the window in the trunk door.

LEXUS GX								year: 2010 →	with and without Keyless System	program No: 11138	from: 2017-09-01																								
connector 8 pin								connector 15 pin							connector 10 pin																				
CAN H	CAN L	CAN H	CAN L	CAN H	CAN L	OUT +	OUT +	OUT -	OUT -	OUT -	OUT -	OUT -	OUT -	OUT -	OUT +	OUT +	OUT +	IN	IN	IN	IN	IN	IN	IN	IN	IN									
CAN1-H	CAN1-L	CAN2-H	CAN2-L	CAN3-H	CAN3-L	Alternative blink control	Alt. contr. centr. lock	Driver door sensor	Passengers door sensor	Trunk lid	Hood sense	Original alarm++	Arming state	Lock factory remote	Unlock factory remote	Switches combination	Handbrake / Parking	Speed 10kmph	Engine running	Engine speed (RPM)	Ignition	Key inserted	Footbrake	Drivers door opening sim.	Turn off the engine	Turn on the engine	Turn signal control	Trunk release	Opening all doors	All doors lock	GND	PWR +12V	Contr. of factory alarm	Contr.c.lock when ign.is on	Comfort closure
1	2	3	4	5	6	7	8	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	1	2	3	4	5	6	7	8	9	10	+	+	+

Attention: The module controls the windows, which are equipped with the "AUTO" function. When the car is locked by the factory remote control, the "Driver door unlock" function does not work. When the car is locked by the factory remote control, the "All doors unlock" function does not work.

LEXUS IS (Hybrid)								year: 2017 →	with and without Keyless System	program No: 13215	from: 2020-05-26																								
connector 8 pin								connector 15 pin							connector 10 pin																				
CAN H	CAN L	CAN H	CAN L	CAN H	CAN L	OUT +	OUT +	OUT -	OUT -	OUT -	OUT -	OUT -	OUT -	OUT -	OUT +	OUT +	OUT +	IN	IN	IN	IN	IN	IN	IN	IN	IN									
CAN1-H	CAN1-L	CAN2-H	CAN2-L	CAN3-H	CAN3-L	Alternative blink control	Alt. contr. centr. lock	Driver door sensor	Passengers door sensor	Trunk lid	Hood sense	Original alarm++	Arming state	Lock factory remote	Unlock factory remote	Switches combination	Handbrake / Parking	Speed 10kmph	Engine running	Engine speed (RPM)	Ignition	Key inserted	Footbrake	Drivers door opening sim.	Turn off the engine	Turn on the engine	Turn signal control	Trunk release	Opening all doors	All doors lock	GND	PWR +12V	Contr. of factory alarm	Contr.c.lock when ign.is on	Comfort closure
1	2	3	4	5	6	7	8	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	1	2	3	4	5	6	7	8	9	10	+	+	+

Attention: The module controls the windows, which are equipped with the "AUTO" function.

LEXUS IS								year: 2014 →	with and without Keyless System	program No: 13432	from: 2020-11-16																								
connector 8 pin								connector 15 pin							connector 10 pin																				
CAN H	CAN L	CAN H	CAN L	CAN H	CAN L	OUT +	OUT +	OUT -	OUT -	OUT -	OUT -	OUT -	OUT -	OUT -	OUT +	OUT +	OUT +	IN	IN	IN	IN	IN	IN	IN	IN	IN									
CAN1-H	CAN1-L	CAN2-H	CAN2-L	CAN3-H	CAN3-L	Alternative blink control	Alt. contr. centr. lock	Driver door sensor	Passengers door sensor	Trunk lid	Hood sense	Original alarm++	Arming state	Lock factory remote	Unlock factory remote	Switches combination	Handbrake / Parking	Speed 10kmph	Engine running	Engine speed (RPM)	Ignition	Key inserted	Footbrake	Drivers door opening sim.	Turn off the engine	Turn on the engine	Turn signal control	Trunk release	Opening all doors	All doors lock	GND	PWR +12V	Contr. of factory alarm	Contr.c.lock when ign.is on	Comfort closure
1	2	3	4	5	6	7	8	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	1	2	3	4	5	6	7	8	9	10	+	+	+

Attention: The module controls the windows, which are equipped with the "AUTO" function.

LEXUS IS								year: 2007 →	with and without Keyless System	program No: 11181	from: 2017-09-01																								
connector 8 pin								connector 15 pin							connector 10 pin																				
CAN H	CAN L	CAN H	CAN L	CAN H	CAN L	OUT +	OUT +	OUT -	OUT -	OUT -	OUT -	OUT -	OUT -	OUT -	OUT +	OUT +	OUT +	IN	IN	IN	IN	IN	IN	IN	IN	IN									
CAN1-H	CAN1-L	CAN2-H	CAN2-L	CAN3-H	CAN3-L	Alternative blink control	Alt. contr. centr. lock	Driver door sensor	Passengers door sensor	Trunk lid	Hood sense	Original alarm++	Arming state	Lock factory remote	Unlock factory remote	Switches combination	Handbrake / Parking	Speed 10kmph	Engine running	Engine speed (RPM)	Ignition	Key inserted	Footbrake	Drivers door opening sim.	Turn off the engine	Turn on the engine	Turn signal control	Trunk release	Opening all doors	All doors lock	GND	PWR +12V	Contr. of factory alarm	Contr.c.lock when ign.is on	Comfort closure
1	2	3	4	5	6	7	8	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	1	2	3	4	5	6	7	8	9	10	+	+	+

Attention: "Factory system alarm" & "Armed state" statuses work correctly after 30 seconds from the closing of the car by factory remote control (earlier opening of the doors equates to opening the car by factory remote control).

LEXUS IS											year: 2005 →	with and without Keyless System											program N° 11181	from: 2017-09-01																			
connector 8 pin								connector 15 pin															connector 10 pin																				
CAN H	CAN L	CAN H	CAN L	CAN H	CAN L	OUT +	OUT -	OUT -	OUT -	OUT -	OUT -	OUT -	OUT -	OUT -	OUT -	OUT -	OUT -	OUT -	OUT -	OUT -	OUT -	OUT +	OUT +	OUT +	IN -	IN -	IN -	IN -	IN -	IN -	IN -	IN -	IN -	IN -	IN -	IN -	IN -	IN -	IN -	IN -	Contr. of factory alarm	Contr. c.lock, when ign.is on	Comfort closure
CAN1-H	CAN1-L	CAN2-H	CAN2-L	CAN3-H	CAN3-L	-	-	Driver door sensor	Passengers door sensor	Trunk lid	Hood sense	Original alarm++	Arming state	Lock factory remote	Unlock factory remote	Switches combination	Handbrake / Parking	Speed 10kmph	Engine running	Engine speed (RPM)	Ignition	Key inserted	Footbrake	Drivers door opening sim.	Turn off the engine	Turn on the engine	Turn signal control	Trunk release	Opening all doors	All doors lock	GND	PWR +12V	+										
1	2	3	4	5	6	7	8	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	+					
+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+					
Attention: -																																											
Switches: [Icons]																																											

LEXUS LS											year: 2013 →	with and without Keyless System											program N° 11251	from: 2017-09-01																			
connector 8 pin								connector 15 pin															connector 10 pin																				
CAN H	CAN L	CAN H	CAN L	CAN H	CAN L	OUT +	OUT -	OUT -	OUT -	OUT -	OUT -	OUT -	OUT -	OUT -	OUT -	OUT -	OUT -	OUT -	OUT -	OUT -	OUT -	OUT +	OUT +	OUT +	IN -	IN -	IN -	IN -	IN -	IN -	IN -	IN -	IN -	IN -	IN -	IN -	IN -	IN -	IN -	IN -	Contr. of factory alarm	Contr. c.lock, when ign.is on	Comfort closure
CAN1-H	CAN1-L	CAN2-H	CAN2-L	CAN3-H	CAN3-L	-	-	Driver door sensor	Passengers door sensor	Trunk lid	Hood sense	Original alarm++	Arming state	Lock factory remote	Unlock factory remote	Switches combination	Handbrake / Parking	Speed 10kmph	Engine running	Engine speed (RPM)	Ignition	Key inserted	Footbrake	Drivers door opening sim.	Turn off the engine	Turn on the engine	Turn signal control	Trunk release	Opening all doors	All doors lock	GND	PWR +12V	+										
1	2	3	4	5	6	7	8	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	+					
+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+					
Attention: - The module controls the windows, which are equipped with the "AUTO" function. When the car is locked by the factory remote control, the "Driver door unlock" function does not work. When the car is locked by the factory remote control, the "All doors unlock" function does not work.																																											
Switches: [Icons]																																											

LEXUS LS											year: 2010 →	with and without Keyless System											program N° 11251	from: 2017-09-01																				
connector 8 pin								connector 15 pin															connector 10 pin																					
CAN H	CAN L	CAN H	CAN L	CAN H	CAN L	OUT +	OUT -	OUT -	OUT -	OUT -	OUT -	OUT -	OUT -	OUT -	OUT -	OUT -	OUT -	OUT -	OUT -	OUT -	OUT -	OUT +	OUT +	OUT +	IN -	IN -	IN -	IN -	IN -	IN -	IN -	IN -	IN -	IN -	IN -	IN -	IN -	IN -	IN -	IN -	IN -	Contr. of factory alarm	Contr. c.lock, when ign.is on	Comfort closure
CAN1-H	CAN1-L	CAN2-H	CAN2-L	CAN3-H	CAN3-L	-	-	Driver door sensor	Passengers door sensor	Trunk lid	Hood sense	Original alarm++	Arming state	Lock factory remote	Unlock factory remote	Switches combination	Handbrake / Parking	Speed 10kmph	Engine running	Engine speed (RPM)	Ignition	Key inserted	Footbrake	Drivers door opening sim.	Turn off the engine	Turn on the engine	Turn signal control	Trunk release	Opening all doors	All doors lock	GND	PWR +12V	+											
1	2	3	4	5	6	7	8	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	+						
+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+						
Attention: -																																												
Switches: [Icons]																																												

LEXUS LS											year: 2006 →	with and without Keyless System											program N° 11251	from: 2018-09-28																				
connector 8 pin								connector 15 pin															connector 10 pin																					
CAN H	CAN L	CAN H	CAN L	CAN H	CAN L	OUT +	OUT -	OUT -	OUT -	OUT -	OUT -	OUT -	OUT -	OUT -	OUT -	OUT -	OUT -	OUT -	OUT -	OUT -	OUT -	OUT +	OUT +	OUT +	IN -	IN -	IN -	IN -	IN -	IN -	IN -	IN -	IN -	IN -	IN -	IN -	IN -	IN -	IN -	IN -	IN -	Contr. of factory alarm	Contr. c.lock, when ign.is on	Comfort closure
CAN1-H	CAN1-L	CAN2-H	CAN2-L	CAN3-H	CAN3-L	-	-	Driver door sensor	Passengers door sensor	Trunk lid	Hood sense	Original alarm++	Arming state	Lock factory remote	Unlock factory remote	Switches combination	Handbrake / Parking	Speed 10kmph	Engine running	Engine speed (RPM)	Ignition	Key inserted	Footbrake	Drivers door opening sim.	Turn off the engine	Turn on the engine	Turn signal control	Trunk release	Opening all doors	All doors lock	GND	PWR +12V	+											
1	2	3	4	5	6	7	8	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	+						
+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+						
Attention: -																																												
Switches: [Icons]																																												

LEXUS LX											year: 2015 →	with and without Keyless System											program N° 11668	from: 2017-09-01																				
connector 8 pin								connector 15 pin															connector 10 pin																					
CAN H	CAN L	CAN H	CAN L	CAN H	CAN L	OUT +	OUT -	OUT -	OUT -	OUT -	OUT -	OUT -	OUT -	OUT -	OUT -	OUT -	OUT -	OUT -	OUT -	OUT -	OUT -	OUT +	OUT +	OUT +	IN -	IN -	IN -	IN -	IN -	IN -	IN -	IN -	IN -	IN -	IN -	IN -	IN -	IN -	IN -	IN -	IN -	Contr. of factory alarm	Contr. c.lock, when ign.is on	Comfort closure
CAN1-H	CAN1-L	CAN2-H	CAN2-L	CAN3-H	CAN3-L	-	-	Driver door sensor	Passengers door sensor	Trunk lid	Hood sense	Original alarm++	Arming state	Lock factory remote	Unlock factory remote	Switches combination	Handbrake / Parking	Speed 10kmph	Engine running	Engine speed (RPM)	Ignition	Key inserted	Footbrake	Drivers door opening sim.	Turn off the engine	Turn on the engine	Turn signal control	Trunk release	Opening all doors	All doors lock	GND	PWR +12V	+											
1	2	3	4	5	6	7	8	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	+						
+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+						
Attention: - The module controls the windows, which are equipped with the "AUTO" function. When the car is locked by the factory remote control, the "Driver door unlock" function does not work. When the car is locked by the factory remote control, the "All doors unlock" function does not work.																																												
Switches: [Icons]																																												

LEXUS LX year: 2012 → with and without Keyless System program No: 11138 from: 2017-09-01

connector 8 pin								connector 15 pin															connector 10 pin																																	
CAN H	CAN L	CAN H	CAN L	CAN H	CAN L	OUT +	OUT -	OUT	OUT	OUT	OUT	OUT	OUT	OUT	OUT	OUT	OUT	OUT	OUT	OUT	OUT	OUT	OUT	OUT	OUT	OUT	OUT	IN	IN	IN	IN	IN	IN	IN	IN	IN	IN																			
CAN1-H	CAN1-L	CAN2-H	CAN2-L	CAN3-H	CAN3-L	Alternative blink control	Alt. contr. centr. lock	Driver door sensor	Passengers door sensor	Trunk lid	Hood sense	Original alarm++	Arming state	Lock factory remote	Unlock factory remote	Switches combination	Handbrake / Parking	Speed 10kmph	Engine running	Engine speed (RPM)	Ignition	Key inserted	Footbrake	Drivers door opening sim.	Turn off the engine	Turn on the engine	Turn signal control	Trunk release	Opening all doors	All doors lock	GND	PWR +12V	Contr. of factory alarm	Contr.c.lock. when ign.is on	Comfort closure																					
1	2	3	4	5	6	7	8	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	1	2	3	4	5	6	7	8	9	10	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+

Attention: The module controls the windows, which are equipped with the "AUTO" function. When the car is locked by the factory remote control, the "All doors unlock" function does not work. The "Trunk release" function does not open the electric trunk lid.

Switches:

LEXUS LX year: 2008 → with and without Keyless System program No: 11138 from: 2017-09-01

connector 8 pin								connector 15 pin															connector 10 pin																																	
CAN H	CAN L	CAN H	CAN L	CAN H	CAN L	OUT +	OUT -	OUT	OUT	OUT	OUT	OUT	OUT	OUT	OUT	OUT	OUT	OUT	OUT	OUT	OUT	OUT	OUT	OUT	OUT	OUT	OUT	IN	IN	IN	IN	IN	IN	IN	IN	IN	IN																			
CAN1-H	CAN1-L	CAN2-H	CAN2-L	CAN3-H	CAN3-L	Alternative blink control	Alt. contr. centr. lock	Driver door sensor	Passengers door sensor	Trunk lid	Hood sense	Original alarm++	Arming state	Lock factory remote	Unlock factory remote	Switches combination	Handbrake / Parking	Speed 10kmph	Engine running	Engine speed (RPM)	Ignition	Key inserted	Footbrake	Drivers door opening sim.	Turn off the engine	Turn on the engine	Turn signal control	Trunk release	Opening all doors	All doors lock	GND	PWR +12V	Contr. of factory alarm	Contr.c.lock. when ign.is on	Comfort closure																					
1	2	3	4	5	6	7	8	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	1	2	3	4	5	6	7	8	9	10	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+

Attention: The module controls the windows, which are equipped with the "AUTO" function. When the car is locked by the factory remote control, the "Driver door unlock" function does not work. When the car is locked by the factory remote control, the "All doors unlock" function does not work.

Switches:

LEXUS NX (Hybrid) year: 2017 → with and without Keyless System program No: 12851 from: 2019-09-26

connector 8 pin								connector 15 pin															connector 10 pin																																	
CAN H	CAN L	CAN H	CAN L	CAN H	CAN L	OUT +	OUT -	OUT	OUT	OUT	OUT	OUT	OUT	OUT	OUT	OUT	OUT	OUT	OUT	OUT	OUT	OUT	OUT	OUT	OUT	OUT	IN	IN	IN	IN	IN	IN	IN	IN	IN	IN																				
CAN1-H	CAN1-L	CAN2-H	CAN2-L	CAN3-H	CAN3-L	Alternative blink control	Alt. contr. centr. lock	Driver door sensor	Passengers door sensor	Trunk lid	Hood sense	Original alarm++	Arming state	Lock factory remote	Unlock factory remote	Switches combination	Handbrake / Parking	Speed 10kmph	Engine running	Engine speed (RPM)	Ignition	Key inserted	Footbrake	Drivers door opening sim.	Turn off the engine	Turn on the engine	Turn signal control	Trunk release	Opening all doors	All doors lock	GND	PWR +12V	Contr. of factory alarm	Contr.c.lock. when ign.is on	Comfort closure																					
1	2	3	4	5	6	7	8	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	1	2	3	4	5	6	7	8	9	10	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+

Attention:

Switches:

LEXUS NX (Hybrid) year: 2014 → with and without Keyless System program No: 13415 from: 2020-10-22

connector 8 pin								connector 15 pin															connector 10 pin																																	
CAN H	CAN L	CAN H	CAN L	CAN H	CAN L	OUT +	OUT -	OUT	OUT	OUT	OUT	OUT	OUT	OUT	OUT	OUT	OUT	OUT	OUT	OUT	OUT	OUT	OUT	OUT	OUT	OUT	IN	IN	IN	IN	IN	IN	IN	IN	IN	IN																				
CAN1-H	CAN1-L	CAN2-H	CAN2-L	CAN3-H	CAN3-L	Alternative blink control	Alt. contr. centr. lock	Driver door sensor	Passengers door sensor	Trunk lid	Hood sense	Original alarm++	Arming state	Lock factory remote	Unlock factory remote	Switches combination	Handbrake / Parking	Speed 10kmph	Engine running	Engine speed (RPM)	Ignition	Key inserted	Footbrake	Drivers door opening sim.	Turn off the engine	Turn on the engine	Turn signal control	Trunk release	Opening all doors	All doors lock	GND	PWR +12V	Contr. of factory alarm	Contr.c.lock. when ign.is on	Comfort closure																					
1	2	3	4	5	6	7	8	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	1	2	3	4	5	6	7	8	9	10	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+

Attention: The module controls the windows, which are equipped with the "AUTO" function.

Switches:

LEXUS NX year: 2014 → with and without Keyless System program No: 11893 from: 2020-08-14

connector 8 pin								connector 15 pin															connector 10 pin																																	
CAN H	CAN L	CAN H	CAN L	CAN H	CAN L	OUT +	OUT -	OUT	OUT	OUT	OUT	OUT	OUT	OUT	OUT	OUT	OUT	OUT	OUT	OUT	OUT	OUT	OUT	OUT	OUT	IN	IN	IN	IN	IN	IN	IN	IN	IN	IN																					
CAN1-H	CAN1-L	CAN2-H	CAN2-L	CAN3-H	CAN3-L	Alternative blink control	Alt. contr. centr. lock	Driver door sensor	Passengers door sensor	Trunk lid	Hood sense	Original alarm++	Arming state	Lock factory remote	Unlock factory remote	Switches combination	Handbrake / Parking	Speed 10kmph	Engine running	Engine speed (RPM)	Ignition	Key inserted	Footbrake	Drivers door opening sim.	Turn off the engine	Turn on the engine	Turn signal control	Trunk release	Opening all doors	All doors lock	GND	PWR +12V	Contr. of factory alarm	Contr.c.lock. when ign.is on	Comfort closure																					
1	2	3	4	5	6	7	8	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	1	2	3	4	5	6	7	8	9	10	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+	+

Attention:

Switches:

LEXUS RC								year: 2016 →	with and without Keyless System										program No: 11338	from: 2017-09-01																									
connector 8 pin								connector 15 pin															connector 10 pin																						
CAN H	CAN L	CAN H	CAN L	CAN H	CAN L	OUT +	OUT -	OUT -	OUT -	OUT -	OUT -	OUT -	OUT -	OUT -	OUT -	OUT -	OUT -	OUT -	OUT -	OUT -	OUT -	OUT -	OUT +	OUT +	OUT +	IN	IN	IN	IN	IN	IN	IN	IN												
CAN1-H	CAN1-L	CAN2-H	CAN2-L	CAN3-H	CAN3-L	Alternative blink control	Alt. contr. centr. lock	Driver door sensor	Passengers door sensor	Trunk lid	Hood sense	Original alarm++	Arming state	Lock factory remote	Unlock factory remote	Switches combination	Handbrake / Parking	Speed 10kmph	Engine running	Engine speed (RPM)	Ignition	Key inserted	Footbrake	Drivers door opening sim.	Turn off the engine	Turn on the engine	Turn signal control	Trunk release	Opening all doors	All doors lock	GND	PWR +12V	Contr. of factory alarm	Contr.c.lock, when ign.is on	Comfort closure										
1	2	3	4	5	6	7	8	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	1	2	3	4	5	6	7	8	9	10	+	+	+	+	+	+	+	+	+	+	+	+	+
Attention: The module controls the windows, which are equipped with the "AUTO" function. The "All doors lock" function does not lock fuel filler flap. The "All doors unlock" function does not unlock fuel filler flap.																																													
Switches: △ ▽ ▹ ▸ ◀ ▶ ◁ ▷ ↺ ↻ 🔍 🗄️ 📄 📊 📅 🕒 📶 ⚙️ 🛠️ 🚗 🚘 🚙 🚚 🚛 🚝 🚞 🚟 🚠 🚡 🚢 🚣 🚤 🚥 🚦 🚧 🚨 🚩 🚪 🚫 🚬 🚭 🚮 🚯 🚰 🚱 🚲 🚳 🚴 🚵 🚶 🚷 🚸 🚹 🚺 🚻 🚼 🚽 🚾 🚿 🏠 🏡 🏢 🏣 🏤 🏥 🏦 🏧 🏨 🏩 🏪 🏫 🏬 🏭 🏮 🏯 🏰 🏱 🏲 🏳 🏴 🏵 🏶 🏷 🏸 🏹 🏺 🏻 🏼 🏽 🏾 🏿 🏿																																													

LEXUS RX								year: 2020 →	with and without Keyless System										program No: 13194	from: 2020-05-26																									
connector 8 pin								connector 15 pin															connector 10 pin																						
CAN H	CAN L	CAN H	CAN L	CAN H	CAN L	OUT +	OUT -	OUT -	OUT -	OUT -	OUT -	OUT -	OUT -	OUT -	OUT -	OUT -	OUT -	OUT -	OUT -	OUT -	OUT -	OUT +	OUT +	OUT +	IN	IN	IN	IN	IN	IN	IN	IN													
CAN1-H	CAN1-L	CAN2-H	CAN2-L	CAN3-H	CAN3-L	Alternative blink control	Alt. contr. centr. lock	Driver door sensor	Passengers door sensor	Trunk lid	Hood sense	Original alarm++	Arming state	Lock factory remote	Unlock factory remote	Switches combination	Handbrake / Parking	Speed 10kmph	Engine running	Engine speed (RPM)	Ignition	Key inserted	Footbrake	Drivers door opening sim.	Turn off the engine	Turn on the engine	Turn signal control	Trunk release	Opening all doors	All doors lock	GND	PWR +12V	Contr. of factory alarm	Contr.c.lock, when ign.is on	Comfort closure										
1	2	3	4	5	6	7	8	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	1	2	3	4	5	6	7	8	9	10	+	+	+	+	+	+	+	+	+	+	+	+	+
Attention: The module controls the windows, which are equipped with the "AUTO" function.																																													
Switches: 🔍 🗄️ 📄 📊 📅 🕒 📶 ⚙️ 🛠️ 🚗 🚘 🚙 🚚 🚛 🚝 🚞 🚟 🚠 🚡 🚢 🚣 🚤 🚥 🚦 🚧 🚨 🚩 🚪 🚫 🚬 🚭 🚮 🚯 🚰 🚱 🚲 🚳 🚴 🚵 🚶 🚷 🚸 🚹 🚺 🚻 🚼 🚽 🚾 🚿 🏠 🏡 🏢 🏣 🏤 🏥 🏦 🏧 🏨 🏩 🏪 🏫 🏬 🏭 🏮 🏯 🏰 🏱 🏲 🏳 🏴 🏵 🏶 🏷 🏸 🏹 🏺 🏻 🏼 🏽 🏾 🏿 🏿																																													

LEXUS RX (CanadaMarket)								year: 2017 →	with and without Keyless System										program No: 12564	from: 2018-12-13																									
connector 8 pin								connector 15 pin															connector 10 pin																						
CAN H	CAN L	CAN H	CAN L	CAN H	CAN L	OUT +	OUT -	OUT -	OUT -	OUT -	OUT -	OUT -	OUT -	OUT -	OUT -	OUT -	OUT -	OUT -	OUT -	OUT -	OUT -	OUT +	OUT +	OUT +	IN	IN	IN	IN	IN	IN	IN	IN													
CAN1-H	CAN1-L	CAN2-H	CAN2-L	CAN3-H	CAN3-L	Alternative blink control	Alt. contr. centr. lock	Driver door sensor	Passengers door sensor	Trunk lid	Hood sense	Original alarm++	Arming state	Lock factory remote	Unlock factory remote	Switches combination	Handbrake / Parking	Speed 10kmph	Engine running	Engine speed (RPM)	Ignition	Key inserted	Footbrake	Drivers door opening sim.	Turn off the engine	Turn on the engine	Turn signal control	Trunk release	Opening all doors	All doors lock	GND	PWR +12V	Contr. of factory alarm	Contr.c.lock, when ign.is on	Comfort closure										
1	2	3	4	5	6	7	8	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	1	2	3	4	5	6	7	8	9	10	+	+	+	+	+	+	+	+	+	+	+	+	+
Attention:																																													
Switches: 🔍 🗄️ 📄 📊 📅 🕒 📶 ⚙️ 🛠️ 🚗 🚘 🚙 🚚 🚛 🚝 🚞 🚟 🚠 🚡 🚢 🚣 🚤 🚥 🚦 🚧 🚨 🚩 🚪 🚫 🚬 🚭 🚮 🚯 🚰 🚱 🚲 🚳 🚴 🚵 🚶 🚷 🚸 🚹 🚺 🚻 🚼 🚽 🚾 🚿 🏠 🏡 🏢 🏣 🏤 🏥 🏦 🏧 🏨 🏩 🏪 🏫 🏬 🏭 🏮 🏯 🏰 🏱 🏲 🏳 🏴 🏵 🏶 🏷 🏸 🏹 🏺 🏻 🏼 🏽 🏾 🏿 🏿																																													

LEXUS RX (Hybrid)								year: 2016 →	with and without Keyless System										program No: 11968	from: 2020-06-16																									
connector 8 pin								connector 15 pin															connector 10 pin																						
CAN H	CAN L	CAN H	CAN L	CAN H	CAN L	OUT +	OUT -	OUT -	OUT -	OUT -	OUT -	OUT -	OUT -	OUT -	OUT -	OUT -	OUT -	OUT -	OUT -	OUT -	OUT -	OUT +	OUT +	OUT +	IN	IN	IN	IN	IN	IN	IN	IN													
CAN1-H	CAN1-L	CAN2-H	CAN2-L	CAN3-H	CAN3-L	Alternative blink control	Alt. contr. centr. lock	Driver door sensor	Passengers door sensor	Trunk lid	Hood sense	Original alarm++	Arming state	Lock factory remote	Unlock factory remote	Switches combination	Handbrake / Parking	Speed 10kmph	Engine running	Engine speed (RPM)	Ignition	Key inserted	Footbrake	Drivers door opening sim.	Turn off the engine	Turn on the engine	Turn signal control	Trunk release	Opening all doors	All doors lock	GND	PWR +12V	Contr. of factory alarm	Contr.c.lock, when ign.is on	Comfort closure										
1	2	3	4	5	6	7	8	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	1	2	3	4	5	6	7	8	9	10	+	+	+	+	+	+	+	+	+	+	+	+	+
Attention:																																													
Switches: 🔍 🗄️ 📄 📊 📅 🕒 📶 ⚙️ 🛠️ 🚗 🚘 🚙 🚚 🚛 🚝 🚞 🚟 🚠 🚡 🚢 🚣 🚤 🚥 🚦 🚧 🚨 🚩 🚪 🚫 🚬 🚭 🚮 🚯 🚰 🚱 🚲 🚳 🚴 🚵 🚶 🚷 🚸 🚹 🚺 🚻 🚼 🚽 🚾 🚿 🏠 🏡 🏢 🏣 🏤 🏥 🏦 🏧 🏨 🏩 🏪 🏫 🏬 🏭 🏮 🏯 🏰 🏱 🏲 🏳 🏴 🏵 🏶 🏷 🏸 🏹 🏺 🏻 🏼 🏽 🏾 🏿 🏿																																													

LEXUS RX								year: 2013 →	with and without Keyless System										program No: 11226	from: 2017-09-01																									
connector 8 pin								connector 15 pin															connector 10 pin																						
CAN H	CAN L	CAN H	CAN L	CAN H	CAN L	OUT +	OUT -	OUT -	OUT -	OUT -	OUT -	OUT -	OUT -	OUT -	OUT -	OUT -	OUT -	OUT -	OUT -	OUT -	OUT -	OUT +	OUT +	OUT +	IN	IN	IN	IN	IN	IN	IN	IN													
CAN1-H	CAN1-L	CAN2-H	CAN2-L	CAN3-H	CAN3-L	Alternative blink control	Alt. contr. centr. lock	Driver door sensor	Passengers door sensor	Trunk lid	Hood sense	Original alarm++	Arming state	Lock factory remote	Unlock factory remote	Switches combination	Handbrake / Parking	Speed 10kmph	Engine running	Engine speed (RPM)	Ignition	Key inserted	Footbrake	Drivers door opening sim.	Turn off the engine	Turn on the engine	Turn signal control	Trunk release	Opening all doors	All doors lock	GND	PWR +12V	Contr. of factory alarm	Contr.c.lock, when ign.is on	Comfort closure										
1	2	3	4	5	6	7	8	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	1	2	3	4	5	6	7	8	9	10	+	+	+	+	+	+	+	+	+	+	+	+	+
Attention: The module controls the windows, which are equipped with the "AUTO" function.																																													
Switches: 🔍 🗄️ 📄 📊 📅 🕒 📶 ⚙️ 🛠️ 🚗 🚘 🚙 🚚 🚛 🚝 🚞 🚟 🚠 🚡 🚢 🚣 🚤 🚥 🚦 🚧 🚨 🚩 🚪 🚫 🚬 🚭 🚮 🚯 🚰 🚱 🚲 🚳 🚴 🚵 🚶 🚷 🚸 🚹 🚺 🚻 🚼 🚽 🚾 🚿 🏠 🏡 🏢 🏣 🏤 🏥 🏦 🏧 🏨 🏩 🏪 🏫 🏬 🏭 🏮 🏯 🏰 🏱 🏲 🏳 🏴 🏵 🏶 🏷 🏸 🏹 🏺 🏻 🏼 🏽 🏾 🏿 🏿																																													

LEXUS RX (Hybrid) (Keyless)

year: 2013 →

with Keyless System

program #: 11226

from: 2017-09-01

Table with 8 columns (CAN H, CAN L, CAN H, CAN L, CAN H, CAN L, OUT +, OUT -) and 8 rows (CAN1-H, CAN1-L, CAN2-H, CAN2-L, CAN3-H, CAN3-L, Alternative blink control, Alt. contr. centr. lock).

Table with 15 columns (OUT -) and 15 rows (Driver door sensor, Passengers door sensor, Trunk lid, Hood sense, Original alarm++, Arming state, Lock factory remote, Unlock factory remote, Switches combination, Handbrake / Parking, Speed 10kmph, Engine running, Engine speed (RPM), Ignition, Key inserted).

Table with 10 columns (OUT +, IN) and 10 rows (Footbrake, Drivers door opening sim., Turn off the engine, Turn on the engine, Turn signal control, Trunk release, Opening all doors, All doors lock, GND, PWR +12V).

Attention: The module controls the windows, which are equipped with the "AUTO" function.

LEXUS RX

year: 2010 →

with and without Keyless System

program #: 11138

from: 2017-09-01

Table with 8 columns (CAN H, CAN L, CAN H, CAN L, CAN H, CAN L, OUT +, OUT -) and 8 rows (CAN1-H, CAN1-L, CAN2-H, CAN2-L, CAN3-H, CAN3-L, Alternative blink control, Alt. contr. centr. lock).

Table with 15 columns (OUT -) and 15 rows (Driver door sensor, Passengers door sensor, Trunk lid, Hood sense, Original alarm++, Arming state, Lock factory remote, Unlock factory remote, Switches combination, Handbrake / Parking, Speed 10kmph, Engine running, Engine speed (RPM), Ignition, Key inserted).

Table with 10 columns (OUT +, IN) and 10 rows (Footbrake, Drivers door opening sim., Turn off the engine, Turn on the engine, Turn signal control, Trunk release, Opening all doors, All doors lock, GND, PWR +12V).

Attention: The module controls the windows, which are equipped with the "AUTO" function. When the car is locked by the factory remote control, the "Driver door unlock" function does not work. When the car is locked by the factory remote control, the "All doors unlock" function does not work.

LEXUS RX (Keyless)

year: 2010 →

with Keyless System

program #: 11226

from: 2017-09-01

Table with 8 columns (CAN H, CAN L, CAN H, CAN L, CAN H, CAN L, OUT +, OUT -) and 8 rows (CAN1-H, CAN1-L, CAN2-H, CAN2-L, CAN3-H, CAN3-L, Alternative blink control, Alt. contr. centr. lock).

Table with 15 columns (OUT -) and 15 rows (Driver door sensor, Passengers door sensor, Trunk lid, Hood sense, Original alarm++, Arming state, Lock factory remote, Unlock factory remote, Switches combination, Handbrake / Parking, Speed 10kmph, Engine running, Engine speed (RPM), Ignition, Key inserted).

Table with 10 columns (OUT +, IN) and 10 rows (Footbrake, Drivers door opening sim., Turn off the engine, Turn on the engine, Turn signal control, Trunk release, Opening all doors, All doors lock, GND, PWR +12V).

Attention: The module controls the windows, which are equipped with the "AUTO" function.

LEXUS SC

year: 2006 →

program #: 11138

from: 2017-09-01

Table with 8 columns (CAN H, CAN L, CAN H, CAN L, CAN H, CAN L, OUT +, OUT -) and 8 rows (CAN1-H, CAN1-L, CAN2-H, CAN2-L, CAN3-H, CAN3-L, Alternative blink control, Alt. contr. centr. lock).

Table with 15 columns (OUT -) and 15 rows (Driver door sensor, Passengers door sensor, Trunk lid, Hood sense, Original alarm++, Arming state, Lock factory remote, Unlock factory remote, Switches combination, Handbrake / Parking, Speed 10kmph, Engine running, Engine speed (RPM), Ignition, Key inserted).

Table with 10 columns (OUT +, IN) and 10 rows (Footbrake, Drivers door opening sim., Turn off the engine, Turn on the engine, Turn signal control, Trunk release, Opening all doors, All doors lock, GND, PWR +12V).

Attention:

LEXUS UX

year: 2019 →

with and without Keyless System

program #: 12714

from: 2020-05-26

Table with 8 columns (CAN H, CAN L, CAN H, CAN L, CAN H, CAN L, OUT +, OUT -) and 8 rows (CAN1-H, CAN1-L, CAN2-H, CAN2-L, CAN3-H, CAN3-L, Alternative blink control, Alt. contr. centr. lock).

Table with 15 columns (OUT -) and 15 rows (Driver door sensor, Passengers door sensor, Trunk lid, Hood sense, Original alarm++, Arming state, Lock factory remote, Unlock factory remote, Switches combination, Handbrake / Parking, Speed 10kmph, Engine running, Engine speed (RPM), Ignition, Key inserted).

Table with 10 columns (OUT +, IN) and 10 rows (Footbrake, Drivers door opening sim., Turn off the engine, Turn on the engine, Turn signal control, Trunk release, Opening all doors, All doors lock, GND, PWR +12V).

Attention: The module controls the windows, which are equipped with the "AUTO" function.

Switches:

LEXUS UX (Hybrid)

year: 2019 →

with and without Keyless System

program #: 12846

from: 2020-05-26

connector 8 pin							
CAN H	CAN L	CAN H	CAN L	CAN H	CAN L	OUT +	OUT -
CAN1-H	CAN1-L	CAN2-H	CAN2-L	CAN3-H	CAN3-L	Alternative blink control	Alt. contr. centr. lock
1	2	3	4	5	6	7	8
+	+	+	+	+	+	+	+

connector 15 pin														
OUT	OUT	OUT	OUT	OUT	OUT	OUT	OUT	OUT	OUT	OUT	OUT	OUT	OUT	OUT
Driver door sensor	Passengers door sensor	Trunk lid	Hood sense	Original alarm++	Arming state	Lock factory remote	Unlock factory remote	Switches combination	Handbrake / Parking	Speed 10kmph	Engine running	Engine speed (RPM)	Ignition	Key inserted
1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
+	+	+	+	+	+	+	+	+	+	+	+	+	+	+

connector 10 pin									
OUT	IN	IN	IN	IN	IN	IN	IN	IN	IN
Footbrake	Drivers door opening sim.	Turn off the engine	Turn on the engine	Turn signal control	Trunk release	Opening all doors	All doors lock	GND	PWR +12V
1	2	3	4	5	6	7	8	9	10
+	+	+	+	+	+	+	+	+	+

Attention: The module controls the windows, which are equipped with the 'AUTO' function.

LIFAN CEBRUM (720)

year: 2014 →

without Keyless System

program #: 11594

from: 2017-09-01

connector 8 pin							
CAN H	CAN L	CAN H	CAN L	CAN H	CAN L	OUT +	OUT -
CAN1-H	CAN1-L	CAN2-H	CAN2-L	CAN3-H	CAN3-L	Alternative blink control	Alt. contr. centr. lock
1	2	3	4	5	6	7	8
+	+	+	+	+	+	+	+

connector 15 pin														
OUT	OUT	OUT	OUT	OUT	OUT	OUT	OUT	OUT	OUT	OUT	OUT	OUT	OUT	OUT
Driver door sensor	Passengers door sensor	Trunk lid	Hood sense	Original alarm++	Arming state	Lock factory remote	Unlock factory remote	Switches combination	Handbrake / Parking	Speed 10kmph	Engine running	Engine speed (RPM)	Ignition	Key inserted
1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
+	+	+	+	+	+	+	+	+	+	+	+	+	+	+

connector 10 pin									
OUT	IN	IN	IN	IN	IN	IN	IN	IN	IN
Footbrake	Drivers door opening sim.	Turn off the engine	Turn on the engine	Turn signal control	Trunk release	Opening all doors	All doors lock	GND	PWR +12V
1	2	3	4	5	6	7	8	9	10
+	+	+	+	+	+	+	+	+	+

Attention:

LIFAN MYWAY

year: 2017 →

program #: 12243

from: 2018-03-01

connector 8 pin							
CAN H	CAN L	CAN H	CAN L	CAN H	CAN L	OUT +	OUT -
CAN1-H	CAN1-L	CAN2-H	CAN2-L	CAN3-H	CAN3-L	Alternative blink control	Alt. contr. centr. lock
1	2	3	4	5	6	7	8
+	+	+	+	+	+	+	+

connector 15 pin														
OUT	OUT	OUT	OUT	OUT	OUT	OUT	OUT	OUT	OUT	OUT	OUT	OUT	OUT	OUT
Driver door sensor	Passengers door sensor	Trunk lid	Hood sense	Original alarm++	Arming state	Lock factory remote	Unlock factory remote	Switches combination	Handbrake / Parking	Speed 10kmph	Engine running	Engine speed (RPM)	Ignition	Key inserted
1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
+	+	+	+	+	+	+	+	+	+	+	+	+	+	+

connector 10 pin									
OUT	IN	IN	IN	IN	IN	IN	IN	IN	IN
Footbrake	Drivers door opening sim.	Turn off the engine	Turn on the engine	Turn signal control	Trunk release	Opening all doors	All doors lock	GND	PWR +12V
1	2	3	4	5	6	7	8	9	10
+	+	+	+	+	+	+	+	+	+

Attention:

LIFAN SOLANO (620)

year: 2013 →

without Keyless System

program #: 11595

from: 2017-09-01

connector 8 pin							
CAN H	CAN L	CAN H	CAN L	CAN H	CAN L	OUT +	OUT -
CAN1-H	CAN1-L	CAN2-H	CAN2-L	CAN3-H	CAN3-L	Alternative blink control	Alt. contr. centr. lock
1	2	3	4	5	6	7	8
+	+	+	+	+	+	+	+

connector 15 pin														
OUT	OUT	OUT	OUT	OUT	OUT	OUT	OUT	OUT	OUT	OUT	OUT	OUT	OUT	OUT
Driver door sensor	Passengers door sensor	Trunk lid	Hood sense	Original alarm++	Arming state	Lock factory remote	Unlock factory remote	Switches combination	Handbrake / Parking	Speed 10kmph	Engine running	Engine speed (RPM)	Ignition	Key inserted
1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
+	+	+	+	+	+	+	+	+	+	+	+	+	+	+

connector 10 pin									
OUT	IN	IN	IN	IN	IN	IN	IN	IN	IN
Footbrake	Drivers door opening sim.	Turn off the engine	Turn on the engine	Turn signal control	Trunk release	Opening all doors	All doors lock	GND	PWR +12V
1	2	3	4	5	6	7	8	9	10
+	+	+	+	+	+	+	+	+	+

Attention:

LUXGEN U7 TURBO

year: 2014 →

program #: 11518

from: 2019-02-06

connector 8 pin							
CAN H	CAN L	CAN H	CAN L	CAN H	CAN L	OUT +	OUT -
CAN1-H	CAN1-L	CAN2-H	CAN2-L	CAN3-H	CAN3-L	Alternative blink control	Alt. contr. centr. lock
1	2	3	4	5	6	7	8
+	+	+	+	+	+	+	+

connector 15 pin														
OUT	OUT	OUT	OUT	OUT	OUT	OUT	OUT	OUT	OUT	OUT	OUT	OUT	OUT	OUT
Driver door sensor	Passengers door sensor	Trunk lid	Hood sense	Original alarm++	Arming state	Lock factory remote	Unlock factory remote	Switches combination	Handbrake / Parking	Speed 10kmph	Engine running	Engine speed (RPM)	Ignition	Key inserted
1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
+	+	+	+	+	+	+	+	+	+	+	+	+	+	+

connector 10 pin									
OUT	IN	IN	IN	IN	IN	IN	IN	IN	IN
Footbrake	Drivers door opening sim.	Turn off the engine	Turn on the engine	Turn signal control	Trunk release	Opening all doors	All doors lock	GND	PWR +12V
1	2	3	4	5	6	7	8	9	10
+	+	+	+	+	+	+	+	+	+

Attention:

Switches:

Switches:

Switches:

Switches: